EzDIS · OCPP 1.6J

How to set up myenergi zappi with EzDIS

https://www.ezdis.net/en/free-ocpp-server/myenergi-zappi

1. Create the charger in EzDIS

1. Sign in to EzDIS, open **EV Chargers** and tap **Add charger**.
2. Enter a **Name** (for example “Bay 1”) and the **Max power (kW)**, then save.
3. **Connect “Bay 1”** opens with the data you will enter in the myenergi zappi:
   - **Server address (OCPP URL)**: `ws://devices.ezdis.net:9000/ev4k2p9x7q1m`.
   - **Secure address (wss://)**: `wss://charger.ezdis.net/ev4k2p9x7q1m`. Use it if the charger supports a secure connection.
   - **Charger identifier**: `ev4k2p9x7q1m`. On the charger it may be called ChargeBox ID, Charge Point ID or Identity.
   - **Password**, if the charger has that field. It is shown only once.

If the charger has a separate field for the identifier, fill it in and still paste the full address: EzDIS recognizes the charger even if it adds its identifier or serial number to the end.

The data above is an example: use your charger's own. Each charger has its own identifier.

2. Configure the myenergi zappi

The zappi is set up from the **myenergi myaccount** website (myaccount.myenergi.com), not on the charger: the myenergi cloud acts as the bridge to EzDIS. You need a zappi with built-in WiFi (its serial number starts with 2) and, in myaccount, the location already completed.

1. Sign in to myaccount.myenergi.com and, in the left-hand menu, open **Location → myenergi Products**. If you don't see **Location**, first complete the location details on the myaccount home screen.

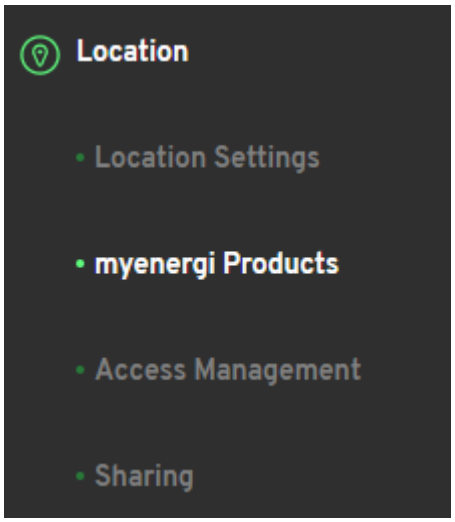

Source: myenergi, “Setting up Open Charge Point Protocol (OCPP)”

2. Find your zappi and click **OCPP Settings**.

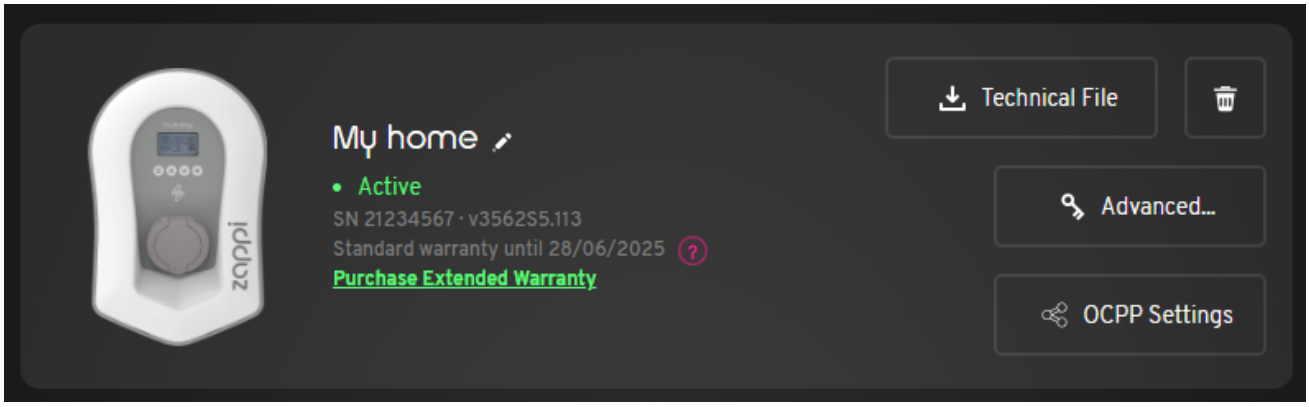

Source: myenergi, “Setting up Open Charge Point Protocol (OCPP)”

3. In the list of management systems choose **Other** and fill in:
   - **Backend URI**: `wss://charger.ezdis.net/`, with the trailing slash and **without** your ID (myenergi adds it).
   - **ChargeboxID**: your ID, for example `ev4k2p9x7q1m`. It defaults to the zappi serial number; change it.
   - **Username**: the same ID, `ev4k2p9x7q1m`.
   - **Authorization Key**: the EzDIS password of that charger.
4. Accept the terms and conditions and click **Enable**.

3. Check the connection

Within a minute or two the charger shows as **Available** in EzDIS. If it doesn't, check that the Backend URI ends in `/` and that **ChargeboxID** and **Username** are exactly your `ev…` ID.

If it does not connect

- Check that the charger has internet access and that the address is complete, with no spaces.
- If the charger page shows “A charger is trying to connect from your network as…”, tap **It is “Bay 1”**: your charger uses its serial number as identifier and connects on its next attempt.
- If it says the server rejected it, the password does not match or the charger is not using the secure address (wss://).

Once connected you can start and stop sessions from EzDIS, register RFID cards, charge per kWh and see each person's usage: it is all in the EV chargers manual.

Manuals and documentation

WEB · support.myenergi.com

Configuration guide

Documentation reviewed on 2026-11-24. Compatibility depends on the variant and firmware.